

EECU - INSTALLATION INSTRUCTIONS


Pin assignment module EECU

- Red with green stripe - power + 24V (car terminal 15)
- Black with white stripe - vehicle weight (terminal 31)

- Blue with black stripe - CAN Low (CAN bus low)
- Yellow with blue stripe - CAN High (CAN bus high)


How to install the module.

- Turn off the ignition
- If the SCR system worked, it is necessary to wait for the completion of all processes
- Remove the OBD2 connector from the bracket to have access to the wire connector
- Connect the module to the connector OBD2

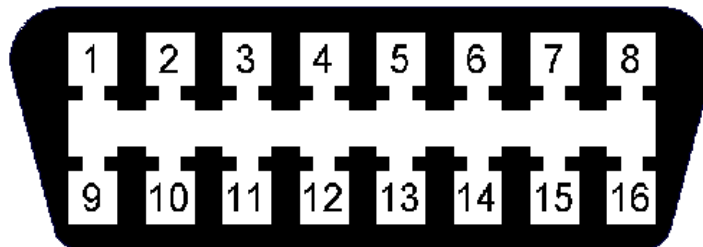

4	Ground	black with white stripe
6	CAN High	yellow with blue stripe
14	CAN Low	blue with black stripe

- Find plus (terminal 15) at the place of installation.
- For the FORD Cargo: remove fuses from the terminals 15 and 30

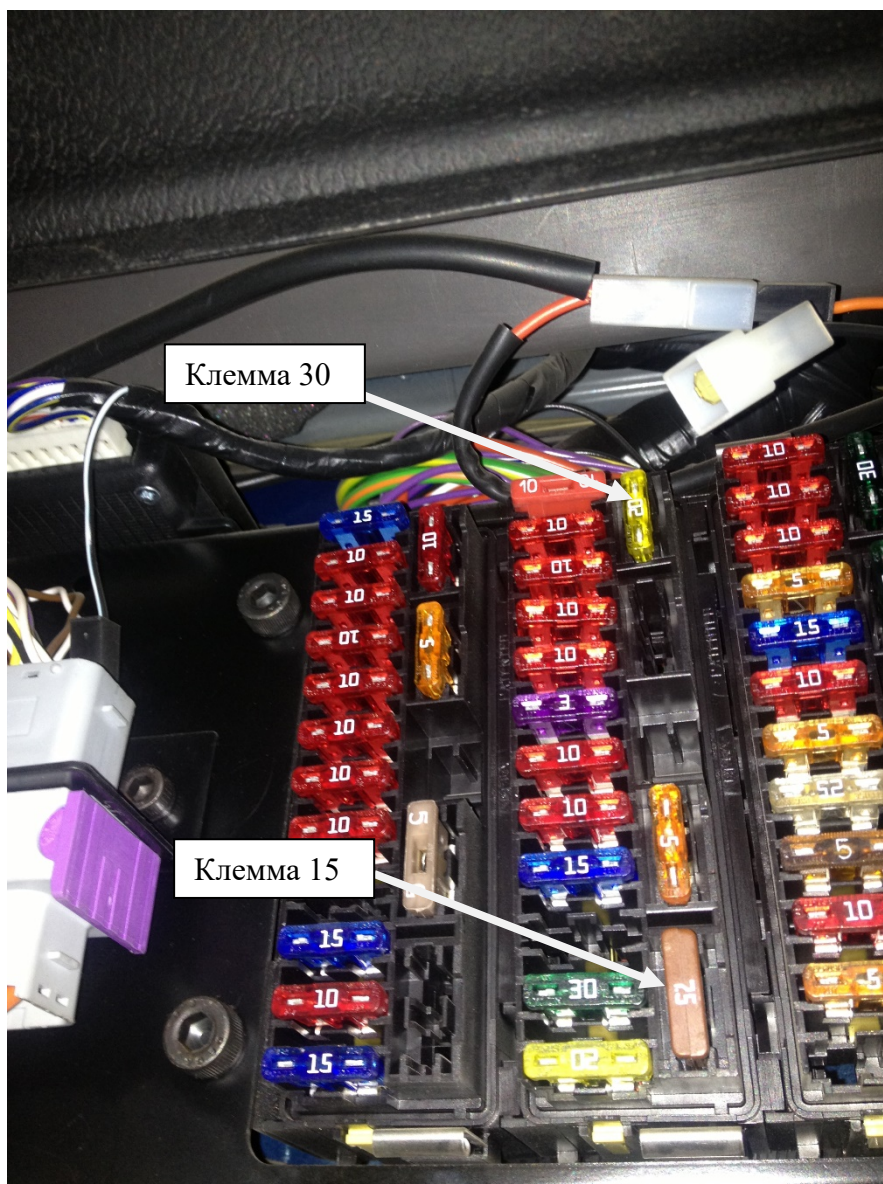

- Turn on the ignition and check that the level AdBlue shows 50% or 70%.
- If necessary remove errors.